




LGT-B10 Brake Pad Light Switch, OE Fit E-Z-Go TXT 91+ Installation Instructions

Tools Needed For Installation:

- Drill & 3/16" Drill Bit
- Rivet Gun

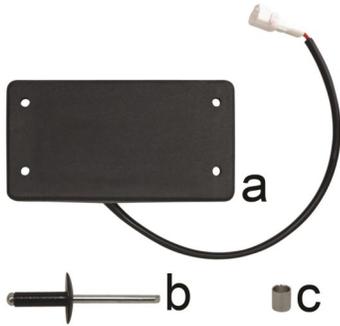

Contents of LGT-B10 Brake Switch:


- a (1 ea.) Brake Pad Light Switch
- b (4 ea.) Rivets
- c (4 ea.) Spacers

Before You Start


1. Turn the key to the OFF position.
2. Place the TOW/RUN switch in TOW if equipped.
3. Remove the system's positive and negative connections from the battery or battery pack.
4. Engage the parking brake.
5. Chock the wheels to prevent the cart from moving in either direction.

Installation


1. Drill through the center of the (6) rivets on the parking brake with a 3/16" drill bit (shown in yellow).

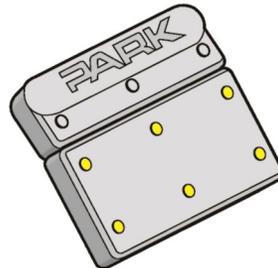


2. Remove the lower portion of the OE brake pad.

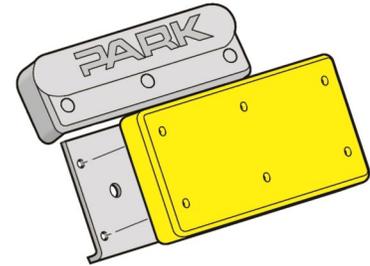

3. Push Spacers in the (4) holes of the new LGT-B10 brake pad.

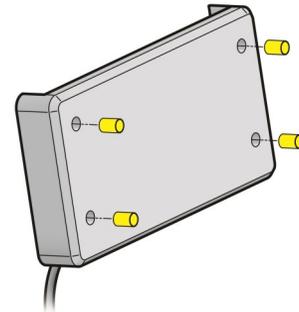

4. Place the LGT-B10 over the brake pedal plate with the wire at the bottom.

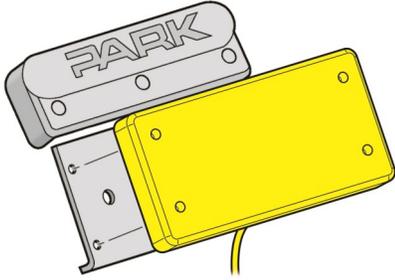


5. Attach the LGT-B10 to the brake pedal plate with the (4) Included Rivets.



6. Route the LGT-B10 wire under the brake pedal and through the opening in the floor. Keep the wire on the bottom side of the pedal's arm and away from any pinch points.

7. Use zip ties (not included with brake pad) to secure the wire to the bottom of the pedal's arm.

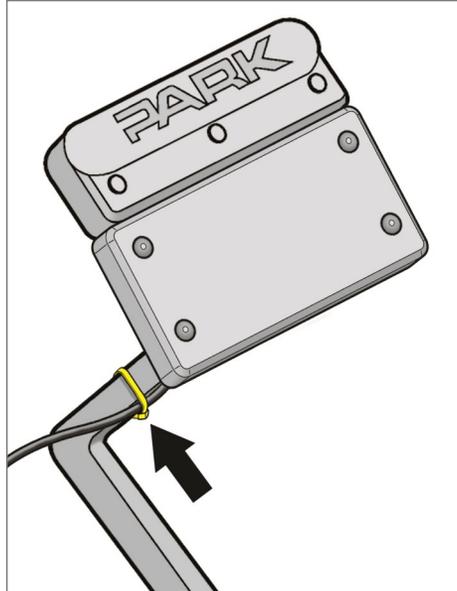

8. Connect the LGT-B10 to the RHOX plug & play wire harness per the light kit's instructions.

Your Brake Pad Light Switch is now complete. Please enjoy safely!

Scan QR code or use the link below to view the installation video.

<https://vimeo.com/user39935056>

